


# **Vertical Float Switch**

#### INSTRUCTION AND OPERATING MANUAL

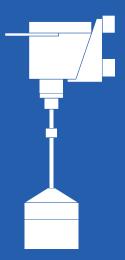

MODELS: FSAVFS10/FSAVFS20

FloodStop® Pump Tech Support: 1-833-786-7779

#### **GENERAL INFORMATION**

To ensure safe and reliable operation, please carefully read this service and installation manual in its entirety before installing and/or using this product. Reasonable care and safe methods in according with sound plumbing practices should be strictly adhered to. Before installation, refer to and understand all relevant local plumbing and electrical codes.

**DO NOT THROW AWAY THIS MANUAL.** Keep it in a safe place so that you may refer to it for periodic service and maintenance.

Always disconnect the power before servicing this product. Failure to do so may result in serious injury or death. Consult with a qualified electrician if you are unsure of the power source or cannot determine whether power has been properly disconnected.

# SAFETY INFORMATION


Please review and follow the safety information listed below.



- Risk of electric shock. Always disconnect power before servicing.
- Do not make any electrical connections while standing on a wet surface or with wet hands.
- Electrical connections and wiring for a pump installation should only be made by qualified personnel.
- This equipment is equipped with an approved 3-conductor cord and 3-prong grounding-type plug, and is only for use with a grounded 110/120VAC receptacle.
- D0 N0T bypass grounding wires or remove the ground prong from the plug.
- DO NOT use an extension cord.
- NEVER attempt to open or service this unit.

#### **INSTALLATION**

- 1. Locate the proper position for the float switch.
- 2. Mount float switch to discharge pipe by tightening the hose clamp with a flat-head screwdriver.
- 3. Fill the sump basin with water. Verify that the pump turns on and off at the desired levels.

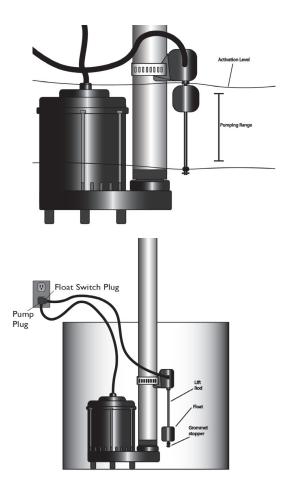

# **SPECIFICATIONS**

Amp Rating	10
Input Voltage	120VAC
Output Voltage	120VAC
Circuit	Normally Open



# TERMS AND CONDITIONS OF SALE

Orders for this product are expressly made conditional on buyer's assent to company's terms and conditions of sale, which can be found at https://ipscorp.com/pdf/ipsdp-tc.pdf, or are available upon request by mail. Any terms and conditions in any of buyer's documents that are inconsistent with or add to seller's terms and conditions of sale are hereby rejected and are not binding upon company.



https://ipscorp.com/pdf/ipsdp-tc.pdf





500 Distribution Parkway Collierville, TN 38017 Phone: 800-888-8312 Fax: 901-853-5008 www.ipscorp.com

86201-02