



Center Drain Galvanized Washing Machine Outlet Box

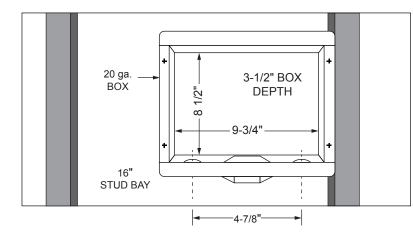

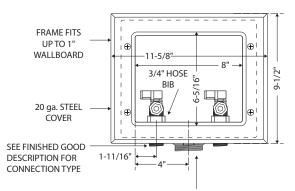

1/1" OR 2" CHASE NIPPLE W/2" RUBBER WASHER & LOCK NUT SEE FINISHED GOOD DESCRIPTION FOR DRAIN SIZE

Washing Machine Outlet Box Installation Instructions B150 & B200 Series

- 1. Remove faceplate that is attached to the washing machine outlet box and save for future installation once sheet rock has been completed.
- 2. Using either nails or screws, mount the box to the stud.
- 3. Box can be mounted on either side of the stud bay.
- 4. Make sure washer box drain is above the water level of the washing machine, approximately 42".
- 5. Connect threaded pipe nipple or male adapter (PVC or ABS) to the drain hole in the box using the provided Drain Kit. Connect appropriate pipe to the drain fitting used. All piping systems should be made to local codes which require a P-trap installation below washer box.
- 6. Connect the water supply piping to the washing machine box valves using appropriate piping for valve connections. Check all local codes.
- 7. Test all piping joints for leaks. Test drain line if required by local code.
- 8. After sheet rock has been installed, screw the faceplate onto the washing machine box.
- 9. Attach washing machine water supply hoses to the 3/4 hose bibb outlets on the front of the appropriate valves and insert the washing machine drain hose into opening of the 2" drain line from inside the washer box. Make sure drain hose is secured so it does not push out of the box due to the water being forced out of the hose from the washing machine.
- 10. Check all local codes for appropriate approvals and requirements.

Washing Machine Outlet Box — B150 & B200 Series

PRODUCT	DESCRIPTION	MODEL	UNITS/CASE	
82026	1/2" MIP/Sweat Conx. Valve, 1-1/2" Threaded Drain Fitting	B150	1	
82032	1/2" MIP/Sweat Conx. Valve, 2" Threaded Drain Fitting	B200	1	
82036	Top-mount 1/2" MIP/Sweat Conx. Valves, 2" Threaded Drain Fitting	BB200TS	1	
81974	1/2" F1807 Conx., 2" Threaded Drain	B200X	1	
81975	1/2" CPVC Conx., 2" Threaded Drain	B200C	1	

See next page for replacement parts



	Replacement Parts for Washing Machine Outlet Box – B150 & B200 Series				
PRODUCT	DESCRIPTION	MODEL	UNITS/CASE		
59513	Washer Rubber Strainer	ABAB6850	1		
88235	Domestic 74CL Valve Blue Handle	6404D	1		
88556	Domestic 74CL Valve Red Handle	6404DR	1		
89431	1/2"Locknut / CPVC Angle Stop	89431	1		
97028	Brass Adapter 1/2" NPT / Sweat	S25701	1		
97030	1/2" Locknut	5154	1		
97031	7/8" Rubber Washers	903P	1		
97032	3/4" & 1/2" Reducing Washers	RW1	1		
97036	2" Rubber Gaskets	L2411	1		
97037	CN150 1-1/2" Chase Nipples	CN150	1		
97038	CN200 2" Chase Nipples	CN200	1		
97045	1-1/2" Flange Nuts	5215	1		
97046	2" Flange Nuts	5225	1		
97118	Brass Pex Adapter - Guy Gray	97118	1		
97119	Brass/CPVC Adapter - Guy Gray	97119	1		
97091	Replacement Faceplate for Models B, BB, WB, FB, & BIM; 20 Ga. Galvanized	В	1		
90067	Faceplate Screws	90067	4		