



## Center Drain White White Powder Coated Metal WMOB with Quarter Turn Valves — Installed

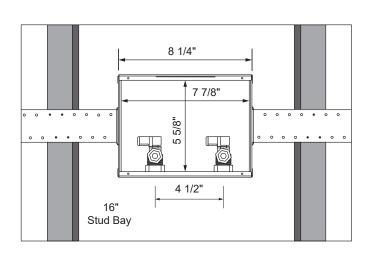

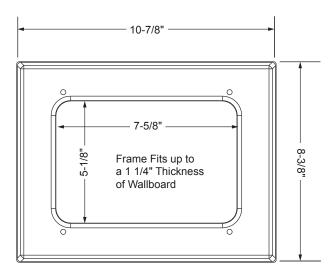

## WMB Series Washing Machine Outlet Box Installation Instructions

- 1. If faceplate that is attached to the washing machine outlet box remove and save for future installation once sheet rock has been completed.
- 2. Using either nails or screws, mount the box to the stud.
- 3. Box can be mounted on either side of the stud bay.
- 4. Make sure washer box drain is above the water level of the washing machine, approximately 42".
- 5. Connect threaded pipe nipple or male adapter (PVC or ABS) to the drain hole in the box using the provided Drain Kit. Connect appropriate pipe to the drain fitting used. All piping systems should be made to local codes which require a P-trap installation below washer box.
- 6. Connect the water supply piping to the washing machine box valves using appropriate piping for valve connections. Check all local codes.
- 7. Test all piping joints for leaks. Test drain line if required by local code.
- 8. After sheet rock has been installed, screw the faceplate onto the washing machine box.
- 9. Attach washing machine water supply hoses to the 3/4 hose bibb outlets on the front of the appropriate valves and insert the washing machine drain hose into opening of the 2" drain line from inside the washer box. Make sure washing machine drain hose is secured so it does not come out under operation.
- 10. Check all local codes for appropriate approvals and requirements.

PRODUCT	DESCRIPTION	MODEL	UNITS/CASE
Standard Pa	acks	'	,
82122	1/2" Qtr-turn Sweat Valves Installed, 2" Slipnut Drain Kit	MWB13	5
82146	1/2" Qtr-turn F1807 Valves Installed, 2" Slipnut Drain Kit	MWB15	5
82154	1/2" Qtr-turn Sweat Valves Installed, Arrester, 2" Slipnut Drain Kit	MWB19	5
86161	1/2" Qtr-turn F1960 Valves Installed, Arrester, 2" PVC Drain Kit	MWB30	5
85802	1/2" Qtr-turn Domestic Sweat Valves Installed, 2" Slipnut Drain Kit	MWB1D	5
Top Mount		'	,
82161	1/2" Qtr-turn Sweat Valves Installed, 2" ABS Drain Kit	MWB21	5
86162	1/2" Qtr-turn Sweat Valves Installed, Arrester, 2" Slipnut Drain Kit	MWB26	5
86163	1/2" Qtr-turn CPVC Valves Installed, Arrester, 2" Slipnut Drain Kit	MWB27	5
86154	1/2" Qtr-turn F1807 Valves Installed, 2" PVC Drain Kit	MWB22	5
86164	1/2" Qtr-turn F1807 Valves Installed, Arrester, 2" Slipnut Drain Kit	MWB28	5
90504	1/2" Qtr-turn F1807 Valves Installed, Arrester, 2" Slipnut Drain Kit	MWB28	5
81977	Replacement Faceplate for Model MWB	90504	1

See second page for replacement parts.

PRODUCT	DESCRIPTION	MODEL	UNITS/CASE		
Replaceme	Replacement Parts				
97034	2" CP Slipnuts for Drain	5062	1		
97036	2" Rubber Gaskets for Drain	L2411	1		
97046	2" Flange Nuts for Drain	5225	1		
90504	Faceplate	90504	1		
89893	Face Plate Screws (4-Pack)	89893	1		

